

SERIE SWING

SWING SERIES



SW71 - SW72 - SW73



SW81 - SW82 - SW83



SW91 - SW92 - SW93

1) Uscire il divano dalla scatola.

1) Extract the couch from the box

